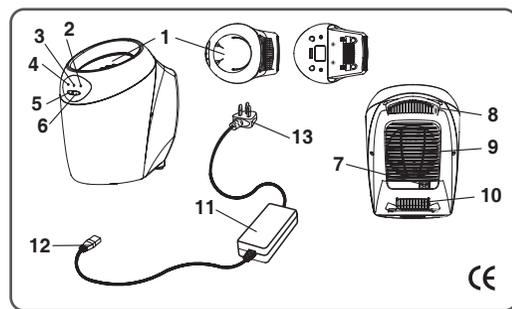


*Hostess***Wine Bottle Chiller**

Model: HW01MA

INSTRUCTION MANUAL**IMPORTANT SAFETY INSTRUCTIONS****Read these instructions thoroughly before using the product.**

1. This Wine Bottle Chiller is intended for household use only.
2. Do not operate the Wine Bottle Chiller with a damaged power cord or plug. If the AC/DC adapter is damaged it must be replaced by the manufacturer or a suitably qualified person.
3. Never put ice or water into the container.
4. Always turn the product off after use, before cleaning, or before moving the appliance.
5. Ensure that the air vents are not blocked.
6. Do not place the appliance near an open flame, cooking or heating appliance, or hot surface.
7. This appliance is not intended for use in wet or damp conditions.
8. The Wine Bottle Chiller should not be operated outdoors.
9. The appliance must be operated on a dry, level surface.
10. Ensure that the power cord is positioned so that it will not get damaged or cause a trip hazard.
11. Never place the power cord under a carpet or rug.
12. Use only the AC/DC adapter supplied with the appliance.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
14. To avoid electric shock do not open the casing. There are no user serviceable parts inside.

FEATURES

1. Bottle Chamber
2. Red Indicator (16°C)
3. Green Indicator (12°C)
4. Blue Indicator (8°C)
5. Power Switch
6. Selector Switch
7. DC Input Socket
8. Cooling Fan Exit Air Vent
9. Cooling Fan Inlet Air Vent
10. Cooling Fan Exit Air Vent
11. AC/DC Adapter (230V~/12Vdc 5A)
12. Power Output Plug
13. UK Plug (3A Fuse)

ENVIRONMENTAL NOTE

This symbol on the product indicates that it must not be discarded as general household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal

OPERATION

- Connect the Power Output Plug (12) into the DC Input Socket (7) at the back of the unit.
- Place the wine bottle in the Bottle Chamber (1) ensuring that it is pressed against the curved cooling plate.
- Connect the plug into a mains socket and switch on the supply.
- Press and hold the Power Switch (5). The cooling fan will start and the Blue Indicator will illuminate.
- Press the Selector Switch (6) to select the required temperature setting. Typically the Blue setting is for champagne, the Green setting is for white wine and the Red setting is for red wine.
- When the wine bottle has reached the selected temperature setting the indicator will flash.
- The wine bottle can now be removed. If the wine bottle is left in the unit the indicator will continue to flash but the unit will maintain the wine bottle at the selected temperature.
- If the wine bottle is removed from the unit and then put back in, the control will check the wine bottle temperature and if necessary turn on the cooling system. In this case the indicator will stop flashing and remain illuminated. When the bottle temperature has returned to the selected temperature the indicator will start to flash again.
- Press and hold the Power Switch (5) to switch off the unit.
- Switch off the mains supply at the socket and remove the plug.

NOTE:

1. To reduce the time required to chill the wine to the selected temperature it is recommended that the bottle is first chilled in a refrigerator.
2. The cooler wine will naturally settle at the bottom of the bottle. The cooling process can be assisted by occasionally removing the bottle and gently tilting and rotating the bottle to mix the cooler and warmer wine.

U.K. WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL, BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

The AC/DC Adaptor does not need to be earthed so there is no green/yellow wire in the cord.

The UK plug should be fitted with a 3A fuse.

If you encounter any problems with your Hostess Wine Bottle Chiller, please contact the appropriate Service Department.

If the Wine Bottle Chiller was bought in the UK, please contact:

**Hostess Customer Service Department,
Crosslee plc,
Halifax, West Yorkshire,
United Kingdom HX3 8DE
Telephone: 01422 203963**

If the Wine Bottle Chiller was bought outside the UK, please contact your retailer.